


# AUTO-PRINT®

## CANISTER FEEDER (CF) ATTACHMENT

Manufactured by Medical Packaging Inc.

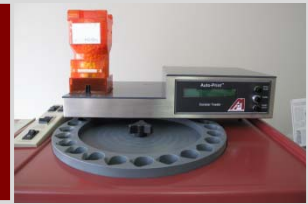

DECREASE PACKAGING COSTS

INCREASE OPERATIONAL EFFICIENCY

REDUCE MEDICATION ERRORS

Medical Packaging Inc. (MPI)'s **Auto-Print® Canister Feeder** is an optional feeder attachment that adapts to MPI's **Auto-Print®** packaging system for oral solids allowing packaging of bulk medications to unit dose. The **Auto-Print® Canister Feeder** is designed specifically for use with canisters compatible with most automated packaging systems and provides the solution for specialized packaging runs, utilizing existing canisters, thus leaving the automated packaging system for scheduled daily packaging. Packaging speeds of sixty (60) doses per minute are maintained when the **Auto-Print® Canister Feeder** is in use.



Requires use of canister shown. MPI does not provide canisters.

MPI's **Auto-Print®** with **Auto-Print® Canister Feeder** can be operated in **CANISTER MODE** and **MANUAL MODE**. In **CANISTER MODE**, a product canister is placed on the feeder and the feeder automatically feeds the oral solid medication one at a time until all medications have been packaged. In **MANUAL MODE**, the oral solid medication is placed on the plastic tray top and individually hand fed into the holes or slots of the feed disk.

### TECHNICAL SPECIFICATIONS

Dimensions:	15.5" L x 8.5" W x 3.0" H – Auto-Print® 19.0" L x 9.5" W x 5.25" H – Canister Feeder
Weight:	65 lbs. - Auto-Print® 3 lbs. - Canister Attachment
Power:	115VAC, 60Hz, 320VA
Safety:	CE Mark.

### KEY FEATURES

- *Product specific cassettes enable quick changeovers from manual to automatic mode and allows for fast clean-up.*
- *Maintains packaging speed of up to sixty (60) packages per minute for 2" x 1½" unit dose packages.*
- *Works only with canisters containing a 7cm x 7cm canister base.*
- *Requires one canister to be provided to MPI to ensure accurate customization.*
- *Compact footprint.*

*MPI's Canister Feeder (CF) attachment is not available for use with MPI's Auto-Print® Express 90 model.*

*All MPI packaging systems are classified as US FDA 510(k) exempt and require the use of MPI authorized disposable materials.*

To request information, contact:  
[sales@medpak.com](mailto:sales@medpak.com)

 **Medical Packaging Inc.**

Auto-Print is a registered trademark of Medical Packaging Inc.

8 Kings Court | Flemington | New Jersey | 08822 | USA  
Toll-Free.800-257-5282 | Phone.609.466.8991 | Fax.609.466.3775 | [www.medpak.com](http://www.medpak.com)



02/01/17